

SOLOY AVIATION SOLUTIONS
CESSNA 206 WITH WING MOUNT CAMERA
NORMAL PROCEDURES REFERENCE CARD

Refer to Soloy Document S2060A Cessna 206 Wing Mount Camera Flight Manual Supplement for all operations. This document provided as a pilot aid and does not supersede the FAA approved POHS.

APPROACHING AIRCRAFT

1. General Condition Check

INTERIOR CHECKS

1. Console Station Stowed and Secure
2. Sensor Controller Stowed and Secure
3. Sensor Monitors Stowed and Secure

RIGHT WING

1. Verify Aileron Trim Tab Position..... 0° Without Camera Installed
Angled Down With Camera Installed

LEFT WING

1. If Wing Camera is Installed:
 - a. Camera Size and Weight..... Verify records

CAMERA LIMITATIONS

Size: 18.5" wide maximum, 25" below wing maximum
(total distance including FLIR adapter)

Weight: 100 lb maximum (total weight)

- b. Camera Mount Verify locked and safety wired.
 - c. Electrical Connections Verify all connections are tight and cable is secure.
2. If Wing Mounted Camera is Not Installed:
 - a. Access Cover Behind Dovetail Mount..... Verify correct cover is installed.
(no cable pass through hole)
3. Verify Aileron Trim Tab Position..... 0° Without Camera Installed
Angled Up With Camera Installed

NOTE

Trim tabs to be equal but opposite from 0° to 9° dependant on the size of payload installed at the wing mount location.